



## CT40 R - CT70 R Quick Guide

This Guide is intended for quick consultation only and does not replace the Use and Maintenance Manual. Before using the machine, read the Use and Maintenance Manual contained in the machine packaging thoroughly and rigorously respect all the instructions.

### PREPARATION/OPERATION

Fill the detergent tank.




Press the suction motor button to disable suction if you want to prewash the surface.



Select working pressure by turning the adjustment knob.



Lower the machine head by pressing the pedal downwards and to the left.

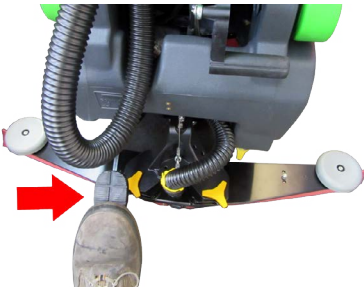

Operate the drive lever.



Pay attention to the LEDs indicating the pressure of the brushes on the work surface. The following may be displayed:  
 a) 1 green LED on: minimum pressure;  
 b) 2 green LEDs on: medium pressure;  
 c) 3 green LEDs on: maximum permitted pressure;  
 d) 3 green LEDs on + 1 red LED on: excessive pressure.



Lower the squeegee using the lever.



Press the "H2O" button for at least 2 seconds to enable detergent flow. Press the button repeatedly to vary the quantity delivered.



Begin working


When you have finished cleaning, proceed as follows:

- Turn the brush motor off.
- Turn the suction motor off.
- Raise the machine head.
- Raise the squeegee.
- If necessary, charge the batteries.

Choose the direction of movement by moving the direction selector, turn the potentiometer to set the work speed.



Press the brush button to enable brush rotation and turn the suction motor on.

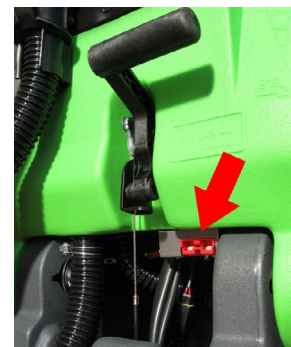



**DAILY MAINTENANCE**

Empty the dirty water drum through the drain hose.



Clean the dirty water drum.




Check the suction filter is undamaged and clean.



Check the detergent tank fill filter is undamaged and clean.



Check the detergent output filter is undamaged and clean.

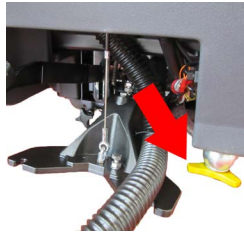

Clean the brush.



Check the squeegee is clean and the blades are not damaged.



Check the battery charge.



To charge, insert the battery charger connector into the connector alongside the squeegee lifting lever.




**REPLACING THE SQUEEGEE BLADES**

- release the clip;
- remove the two blade retainers by pushing them towards the outside of the squeegee then extracting them;
- remove the blade;
- reuse the same blade by reversing the edge in contact with the floor until all four edges are worn out, or replace with a new blade, fitting it onto the screws on the body of the squeegee;
- reposition the two blade retainers by centring the widest part of the slots over the fixing screws on the squeegee body, then pushing the blade retainers inwards;
- fasten the clip;

**AUTOMATIC BRUSH ATTACHMENT**

Brush attachment, lift the head by pressing the pedal and fit the rollers in their housing by first inserting them on the drive pulley, then pushing them upwards until they click into place.

Brush removal, raise the head by pressing the pedal and release the brushes by pulling them downwards from the side opposite the drive pulley, then extracting them from their housing.

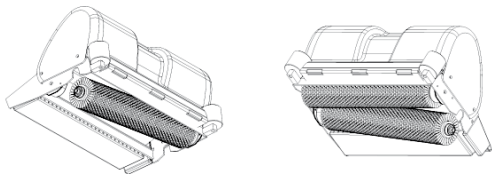

THE MACHINE DOES NOT COME ON/START UP	CHECK THE BATTERY CHARGE
THE SUCTION MOTOR DOES NOT WORK	CHECK THE DIRTY WATER DRUM IS NOT FULL CHECK THE DIRTY WATER DRUM LEVEL SENSOR IS NOT BLOCKED/MALFUNCTIONING
THE MACHINE LEAVES THE FLOOR WET	CHECK THE SQUEEGEE BLADES ARE NOT WORN CHECK THERE IS NO DEBRIS BETWEEN THE TWO SQUEEGEE BLADES CHECK THERE IS NO DEBRIS IN THE SUCTION HOSE CHECK THE SUCTION FILTER IS UNDAMAGED AND CLEAN CHECK THE DETERGENT TANK LID IS CLOSED CORRECTLY CHECK THE SUCTION HOSE IS CORRECTLY ATTACHED TO THE SQUEEGEE
THE MACHINE LEAVES THE FLOOR DIRTY	CHECK THE TYPE OF BRUSH/PAD IN USE IS SUITABLE FOR THE TYPE OF DIRT AND FLOOR
THE MACHINE LEAVES STRIPES OF WET FLOOR	CHECK THE FLOOR HAS BEEN BRUSHED BEFORE USING THE MACHINE CHECK THERE IS NO DEBRIS BETWEEN THE TWO SQUEEGEE BLADES CHECK THE SQUEEGEE BLADES ARE NOT WORN CHECK THE SQUEEGEE IS CORRECTLY ADJUSTED