



This Guide is intended for quick consultation only and does not replace the Use and Maintenance Manual. Before using the machine, read the Use and Maintenance Manual contained in the machine packaging thoroughly and rigorously respect all the instructions.

## PREPARATION/ OPERATION


Switch the machine on by turning the ignition key to the ON position.

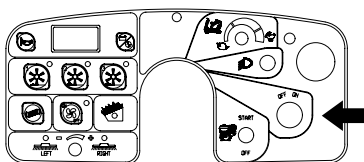


Choose the direction of travel by pressing the push-buttons.

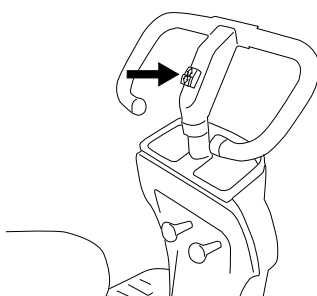


To collect voluminous objects, press the front flap lift pedal.

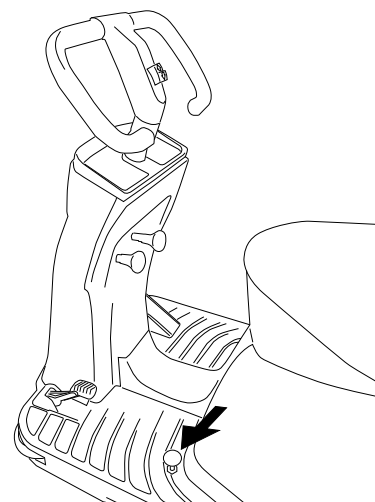


Select one of the three working programs.

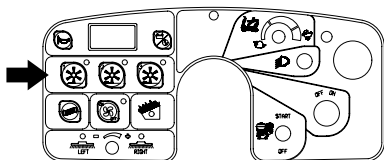


Adjust the machine's speed using the potentiometer.

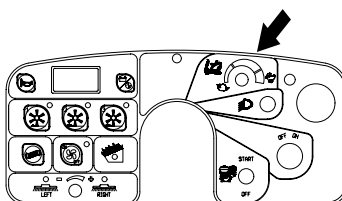


To stop the machine press the brake pedal, which also acts as a parking brake, using the special locking lever.

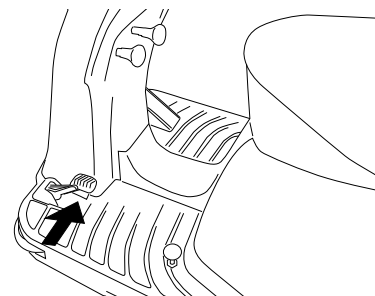

Lower the side brushes.

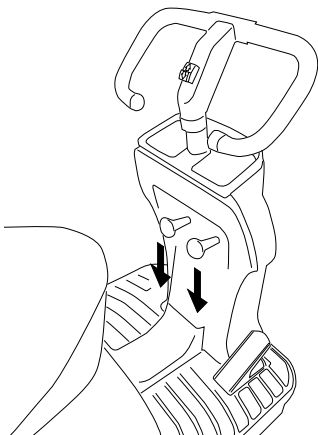


DUAL POWER version, start the engine by temporarily moving the selector to START.

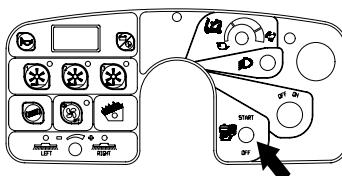

## Emptying the bin:

- Release the bin lock.
- Pull out the rear bin by means of its handle.
- Take the bin (which is fitted with wheels) to the rubbish collection point and empty it.

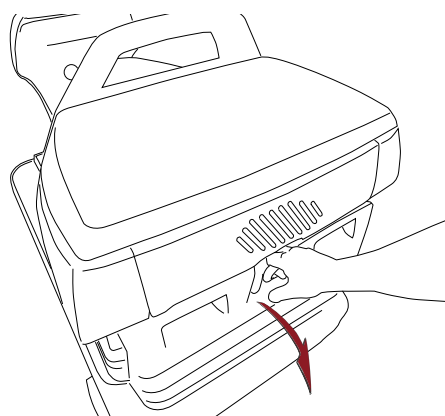


## Daily maintenance:

When you have finished cleaning, proceed as follows:

- Turn the machine off.
- Activate the parking brake.
- Raise the side brushes to prevent damage.
- Recharge the batteries if necessary, using the connector provided.

## Weekly maintenance:


Check the level of electrolyte in the batteries, if using acid batteries.

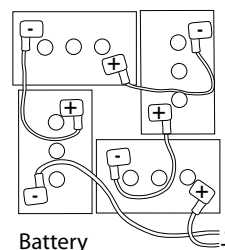

Battery

## Empty the debris bin


Check and remove any debris wrapped around the side brushes and on the centre brush.

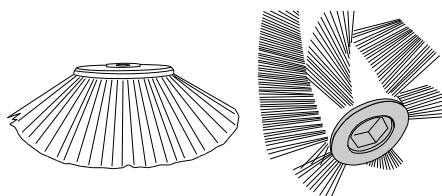

Check that the suction filter is tight and clean.

## INSPECTING AND REPLACING THE CENTRE BRUSH

- Unscrew the knob and open the door on the left of the machine.
- Unscrew the three knobs securing the brush compartment cover.
- Pull out the brush cover compartment.
- Remove the brush, holding it on the plastic core.
- Remove the adapter from the core of the old brush and fit it to the new brush, taking care to keep the bristles aligned in the same direction.
- Fit the new brush and make sure that the adapter is inserted on the drive hub.
- Replace the brush compartment cover using the knobs, following the dismantling operations in reverse order.

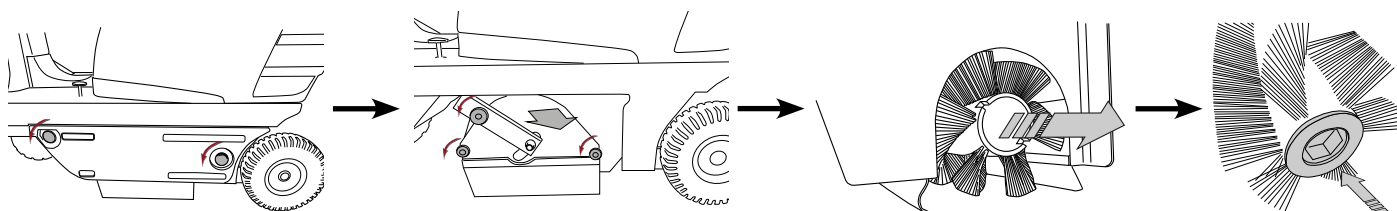

## ADJUSTING SIDE BRUSH HEIGHT

- Move the side brush to the working position.
- Loosen the adjustment screws on the brush motor support.
- Manually move the brush to the required position.
- Tighten the adjustment screws.

